# **JUMO TAROS S46 H**

# **Pressure Transmitter**







**Operating Manual** 



40207100T90Z001K000

V2.01/EN/00705001/2021-10-14

# **Contents**

1	Safety information 4	ı
2	Introduction	
2.1 2.2	Intended use            Block diagram	
3	Identifying the device version	
3.1 3.2 3.3	Nameplate.       .7         Order details       .8         Accessories.       .1	
4	Mounting	1
4.1 4.2 4.2.1 4.2.2 4.3	General information1Dimensions1Transmitter with electrical connections1Process connections1Important information for usage according to EHEDG1	2 2 3
5	Electrical connection	5
5.1 5.2	Installation notes	
6	Operation	6
6.1	Zero point adjustment	6
7	Maintenance, cleaning and returns	7
7.1 7.2 7.3	Maintenance       Manual cleaning for maintenance or storage       Returns	7
8	Technical data	8
8.1 8.2 8.3 8.4 8.5	Mechanical features1Measuring range and accuracy1Electrical data2Environmental influences2Approvals and approval marks2	8 0 1
9	China RoHS	3

## 1 Safety information

#### General

This manual contains information that must be observed in the interest of your own safety and to avoid material damage. This information is supported by symbols which are used in this manual as indicated.

Please read this manual before starting up the device. Store this manual in a place that is accessible to all users at all times.

If difficulties occur during startup, please do not intervene in any way that could jeopardize your warranty rights!

#### Warning symbols



#### **DANGER!**

This symbol indicates that **personal injury from electrocution** may occur if the appropriate precautionary measures are not taken.



#### **WARNING!**

This symbol in connection with the signal word indicates that **personal injury** may occur if the respective precautionary measures are not carried out.



#### **CAUTION!**

This symbol in connection with the signal word indicates that **material damage or data loss** will occur if the respective precautionary measures are not taken.



#### **CAUTION!**

This symbol indicates that **components could be destroyed** by electrostatic discharge (ESD = Electro Static Discharge) if the respective cautionary measures are not taken.

Only use the ESD packages intended for this purpose to return device inserts, assembly groups, or assembly components.



#### **READ THE DOCUMENTATION!**

This symbol, which is attached to the device, indicates that the associated **documentation for the device** must be **observed**. This is necessary to identify the nature of the potential hazard, and to take measures to prevent it.

#### Note symbols



#### NOTE!

This symbol refers to **important information** about the product, its handling, or additional benefits.



#### REFERENCE!

This symbol refers to additional information in other sections, chapters, or other manuals.



#### **FURTHER INFORMATION!**

This symbol is used in tables and indicates that **further information** is provided after the table.

# 1 Safety information



#### **DISPOSAL!**

At the end of its service life, the device and any batteries present do not belong in the trash! Please ensure that they are **disposed of** properly and in an **environmentally friendly** manner.

## 2 Introduction

#### 2.1 Intended use

The pressure transmitter is used to acquire relative and absolute pressures in liquid and gaseous media.


The JUMO TAROS S46 H with analog output signal has been developed specifically for hygienic applications. The pressure transmitter has a pressure measuring cell with a piezoresistive silicon sensor. The pressure is converted into an electrical current or voltage signal and output via various electrical connections.

A built-in magnetoresistive switch (MRS) enables the user to adjust the zero point of the device externally using a magnet.

The pressure transmitter is EAC-compliant and UL-approved<sup>1</sup>. It is certified according to EHEDG in the versions with the process connections clamp, VARIVENT®, and JUMO PEKA.

The protection offered by the device may be impaired if the device is used in a way that does not comply with the manufacturer's intended use.

#### 2.2 Block diagram

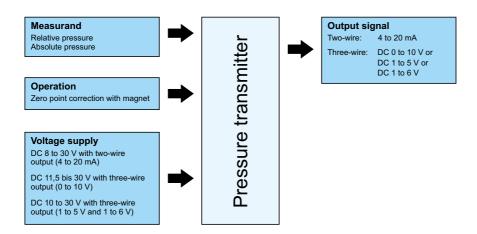

The approval stipulates use of the transmitter indoors only. All surfaces are made from stainless steel in the versions with electrical **connection 36** (round plug M12 × 1) and electrical **connection 75** (terminal head). These versions of the transmitter are also suitable for outdoor use.

#### 3.1 Nameplate

#### **Position**

The nameplate is laser-etched on the device surface.



#### **Table of contents**

The nameplate shows important information. This includes:

Description	Designation on the nameplate	Example
Device type	Тур	402071/000
Part no.	TN	00123456
Measuring range	→	0 to 0.1 bar relative pressure
Voltage supply	€)	=== DC 8 to 30 V/25 mA
Output signal	$\rightarrow$	4 to 20 mA
Fabrication number	F-Nr.	0123456701020240123

#### Device type (Typ)

Compare the specifications on the nameplate with your order documents. The supplied device version can be identified using the order code (⇒ chapter 3.2 "Order details", Page 8).

#### Part no. (TN)

The part no. uniquely identifies an article in the catalog. It is important for communication between the customer and the sales department.

#### Fabrication number (F-Nr.)

Among other things, the fabrication number indicates the **production date** (year/week) and the hardware version number.

The production date is represented by digits 12 to 15 (from the left).

Example: F-No = 01234567010**2024**0123.

The device in this example was produced in the year 2020, in the 24th week.

# 3 Identifying the device version

# 3.2 Order details

	(1)	Basic type
402071		JUMO TAROS S46 H – pressure transmitter
	(2)	Basic type extension
000		None
045		Autoclave-compatible version <sup>a, b</sup>
051		Relative-pressure version without zero point adjustment
999		Special version
	(3)	Input
478		-1 to 0 bar relative pressure
479		-1 to +0.6 bar relative pressure
449		-1 to +1 bar relative pressure
480		-1 to +1.5 bar relative pressure
481		-1 to +3 bar relative pressure
482		-1 to +5 bar relative pressure
483		-1 to +9 bar relative pressure
484		-1 to +15 bar relative pressure
485		-1 to +24 bar relative pressure
428		-0.4 to +0.4 bar relative pressure
427		-0.1 to +0.1 bar relative pressure
425		0 to 0.1 bar relative pressure
426		0 to 0.16 bar relative pressure
451		0 to 0.25 bar relative pressure
452		0 to 0.4 bar relative pressure
453		0 to 0.6 bar relative pressure
454		0 to 1 bar relative pressure
455		0 to 1.6 bar relative pressure
456		0 to 2.5 bar relative pressure
457		0 to 4 bar relative pressure
458		0 to 6 bar relative pressure
459		0 to 10 bar relative pressure
460		0 bar to 16 bar relative pressure
461		0 bar to 25 bar relative pressure
462		0 bar to 40 bar relative pressure
463		0 bar to 60 bar relative pressure
464		0 bar to 100 bar relative pressure
487		0 to 0.6 bar absolute pressure
488		0 to 1 bar absolute pressure
489		0 to 1.6 bar absolute pressure
490		0 to 2.5 bar absolute pressure
491		0 to 4 bar absolute pressure
500		0 to 5 bar absolute pressure
492		0 to 6 bar absolute pressure
493		0 to 10 bar absolute pressure
494		0 to 16 bar absolute pressure

# 3 Identifying the device version

495		0 to 25 bar absolute pressure
505		0 to 40 bar absolute pressure
998		Special measuring range for absolute pressure
999		Special measuring range for relative pressure
	(4)	Output
405		4 to 20 mA, 2-wire
415		DC 0 to 10 V, three-wire
418		DC 1 to 5 V, three-wire
420		DC 1 to 6 V, three-wire
	(5)	Process connection
604		Taper socket with union nut DN 25, DIN 11851 (dairy pipe fitting) <sup>c</sup>
607		Taper socket with union nut DN 50, DIN 11851 (dairy pipe fitting) <sup>d</sup>
613		Clamping socket (clamp) DN 25, 32, 40, DIN 32676 <sup>e</sup>
616		Clamping socket (clamp) DN 50, DIN 32676, 2" ISO 2852 <sup>e</sup>
652		Tank connection with grooved union nut DN 25 <sup>c</sup>
653		Tank connection with grooved union nut DN 40 <sup>c</sup>
685		VARIVENT® connection DN 32/25
686		VARIVENT® connection DN 50/40
997		JUMO PEKA hygienic process connection
	(6)	Process connection material
53		Stainless steel 1.4404/1.4435
	(7)	Electrical connection
12		Attached cable, shielded, length of 2 m
36		Round plug M12 × 1
61		Line socket DIN EN 175301-803, form A
75		Terminal head
	(8)	Measuring system, filling medium
01		Silicone oil
	(9)	Extra codes
000		None
061		With UL approval <sup>f</sup>
374		Inspection certificate 3.1 EN 10204 – material
452		Parts wetted by medium electrolytically polished
462		Inverted output signal
624		Oil and grease free
870		Inspection certificate 3.1 EN 10204 – surface
871		Inspection certificate 3.1 EN 10204 – accuracy
872		Declaration of compliance with the order 2.1 EN 10204 – material
873		Declaration of compliance with the order 2.1 EN 10204 – surface
874		Declaration of compliance with the order 2.1 EN 10204 – accuracy
875		Declaration of compliance with the order 2.1 EN 10204 – data sheet
`		

<sup>&</sup>lt;sup>a</sup> Only with round plug M12 × 1 (electrical connection 36).

b If the devices work with relative pressure, the relative pressure is compensated using round plug M12 × 1. To ensure reliable pressure compensation, use a corresponding mating connector with pressure equalization hose in the cable (part no. 00512341). Alternatively, a pressure compensation adapter (part no. 00739821) can be used.

<sup>&</sup>lt;sup>c</sup> Only possible with measuring ranges up to 40 bar.


<sup>&</sup>lt;sup>d</sup> Only possible with measuring ranges up to 25 bar.

# 3 Identifying the device version

<sup>e</sup> The maximum measuring range that can be used is based on the clamp's pressure stage.

f Not possible with electrical connection 12 (attached cable).

Order code Order example



#### 3.3 Accessories



#### NOTE!

The following accessories are **not** UL-approved.

Item	Part no.
Cable socket, 4-pole, M12 × 1, straight, with 5 m PVC cable, with PA pressure equalization	00512341
hose	
Line socket, 4-pole, M12 × 1, straight, with 2-m PVC cable, without pressure compensation	00404585
Line socket, 4-pole, M12 × 1, angled, with 2-m PVC cable, without pressure compensation	00409334
Magnetic pin for simple adjustment of zero point	00736330
End cap M12 × 1 (for autoclave-compatible version)	00736095
Pressure compensation adapter M12 × 1	00739821



#### NOTE!

When using a transmitter with UL approval, the user must make sure that the accessory he uses is also approved for a UL application (e.g. cable with UL approval AVLV2/8 and/or cable with UL approval CYJV/7 or CYJV/8 or PVVA/7 or PVVA2/8, in each case approved for ambient temperatures > 90 °C).

#### 4.1 General information



#### NOTE!

Check that the device is compatible with the measurement medium ⇒ chapter 8.4 "Environmental influences", Page 21.

#### **Mounting site**

- Ensure that the device is fastened safely and with low vibrations
- Avoid direct sunlight
- Please note the admissible ambient temperatures at the installation position ⇒ chapter 8.4 "Environmental influences", Page 21

#### Installation position

The device can be installed in any position.


We recommend the "upright" installation position, as shown below:





# 4 Mounting


#### 4.2 Dimensions

#### 4.2.1 Transmitter with electrical connections

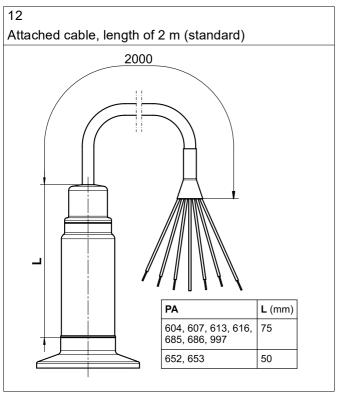

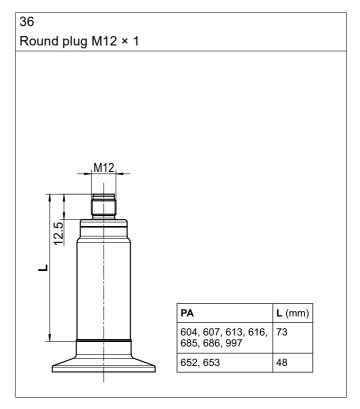

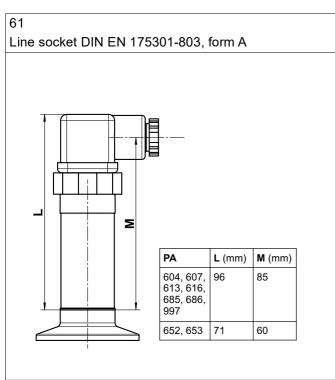


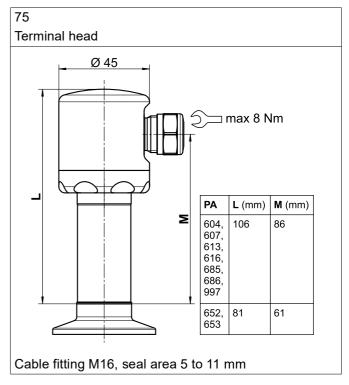



**PA** = process connection


#### 4.2.2 Process connections


# Taper socket with union nut DN 25

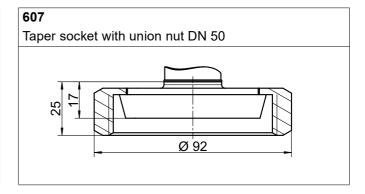


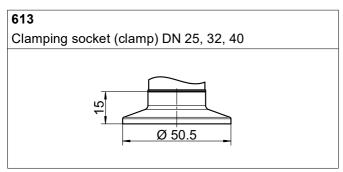


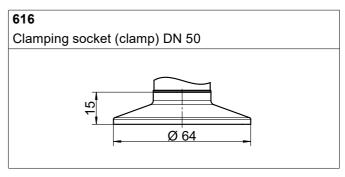

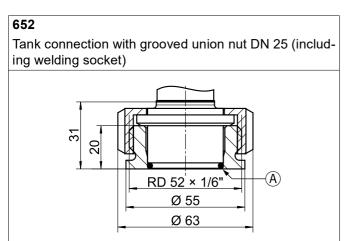

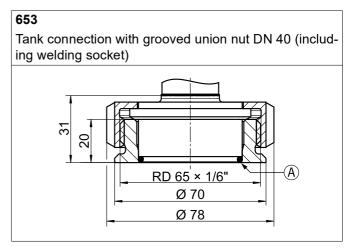

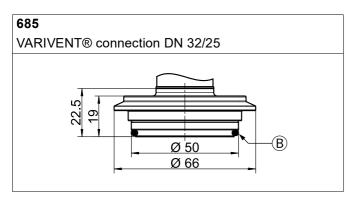

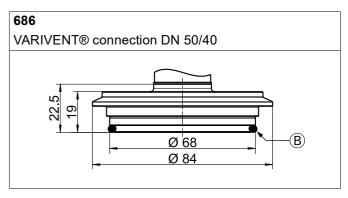


(B) Sealing ring, EPDM<sup>a</sup>

<sup>(</sup>A) Sealing ring, FPM

<sup>&</sup>lt;sup>a</sup> EHEDG conformity according to "EHEDG Position Paper" is only ensured with EPDM.

# 4 Mounting

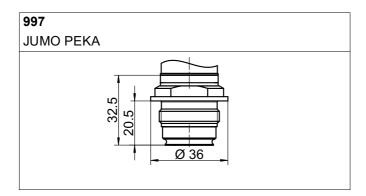



#### NOTE!

Detailed specifications on the JUMO PEKA process connection system can be found in data sheet 409711.

Other process connections upon request!

#### 4.3 Important information for usage according to EHEDG

The following process connections are suitable for usage according to EHEDG:


- 613 and 616 (Clamp DN 25/32/40/50 with Tri-Clamp seals Combifit International B.V.)
- 685 and 686 (VARIVENT® connections DN 32/25 and DN 50/40 with EPDM O-ring)
- 997 (JUMO PEKA with FKM O-ring)

The pressure transmitter is suitable for CIP (Cleaning in Place) when installed accordingly. For details of the temperature resistance and material resistance, see chapter 8.4 "Environmental influences", Page 21.

#### Observe the following points to ensure EHEDG compliant integration in the respective plants:

- · Where possible, provide a cavity-free installation.
- · Install the connecting sockets so that they are self-draining.
- Use only EHEDG approved process connections according to the current EHEDG position paper.
- When used on tanks, the installation must be front-flush. Cleaning through direct spraying must be ensured. Cavities must be detectable.
- Install the leakage opening so that it is clearly visible. Install vertical lines facing downwards.

The following drawing shows an example installation. To avoid cavities, **L must be < D**.

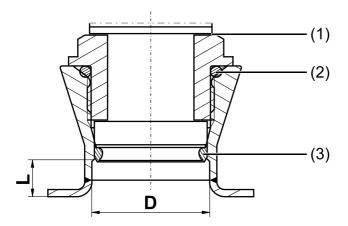

- (1) Leakage opening
- (2) Rear seal
- (3) Front-flush seal

#### 5.1 Installation notes



#### NOTE!

The electrical connection must only be performed by qualified personnel.

The electromagnetic compatibility meets standard DIN EN 61326.

Do not connect any additional loads to the voltage supply of the device.

The device is not suitable for installation in potentially explosive areas.

#### 5.2 Connection diagram

Connection		Terminal assignment <sup>a</sup>					
			3 4	( I ( )			
		12	36	61	75		
		Attached cable	Round plug M12 × 1	Cable socket	Terminal head		
4 to 20 mA, 2-wire (output 405)							
Voltage supply DC 8 to 30 V	U <sub>B</sub> /S+	White	1	1	1		
	0 V/S-	Black	3	2	2		
DC 0 to 10 V, 3-wire (output 415)					•		
Voltage supply DC 11.5 V to 30 V	U <sub>B</sub>	White	1	1	1		
	0 V/S-	Black	2	2	2		
	S+	Yellow	3	3	3		
DC 1 to 5 V, three-wire (output 41 DC 1 to 6 V, three-wire (output 42	•						
Voltage supply DC 10 to 30 V	U <sub>B</sub>	White	1	1	1		
	0 V/S-	Black	2	2	2		
	S+	Yellow	3	3	3		
Functional bonding conductor FB <sup>b</sup> (all output variants)	<u></u>	Shield/green	4		4		

<sup>&</sup>lt;sup>a</sup> Figure: Connection to the pressure transmitter

<sup>&</sup>lt;sup>b</sup> As a basic principle, the device is grounded via the process connection. Alternatively, the device can also be grounded via the electrical connection on all variants. However, grounding via both the process connection **and** the electrical connection is not admissible.

Admissible effect on the "attached cable" variant	
Smallest bending radius (fixed)	40 mm
Max. tensile force on the cable	20 N

#### 6.1 Zero point adjustment

#### **General Information**

In the case of device versions designed for relative pressure, there is the option of a simple pressure/zero point adjustment (offset) using a magnet (remanence  $B_R \ge 1$  T, e.g. NdFeB dia. 4 × 10 mm). This actuates a magnetoresistive switch inside the device when approaching it. A suitable magnet is available from JUMO as an accessory (part no. 00736330).

This provides a quick and simple way to correct zero point offsets caused by the installation or zero point offsets that have arisen following autoclaving, for example.

#### Requirements

The following conditions must be met in order to carry out a successful zero point adjustment:

- The adjustment must take place within a **timeframe of a maximum of 2 seconds** once the device is switched on.
- The pressure at the device at the point of the zero point adjustment must **not deviate more than** ±10 % from the positive pressure measuring range of the device 1.


#### **Procedure**

- 1. Hold the magnet at the position of the QR code (1) on the nameplate of the device.
- 2. Switch on the voltage supply for the device

The device recognizes the magnet (within the first 2 seconds) and automatically readjusts the zero point. As a result, the switch-on time is slightly delayed

3. Remove the magnet from the housing and keep it for further use.

The zero point adjustment is complete. The new zero point is permanently saved. However, you can carry out a further zero point adjustment at any time.

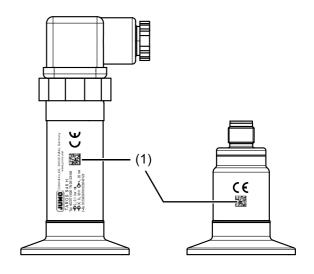



#### NOTE!

If the magnetic field is not applied within the timeframe of approx. 2 seconds after the device is switched on, it will not affect the zero point of the device.

A further zero point adjustment can only take place once the device has been switched off and switched back on again.

Example 3: Measuring range -1 to 5 bar rel.; deviation from ambient pressure max. ±0.5 bar.

Example 1: Measuring range 0 to 1 bar rel.; deviation from ambient pressure max. ±0.1 bar. Example 2: Measuring range -1 to +0.6 bar rel.; deviation from ambient pressure max. ±0.1 bar.

# 7 Maintenance, cleaning and returns

#### 7.1 Maintenance

The pressure transmitter is maintenance-free.

In the event of a malfunction, please return the device to the manufacturer together with accurate fault information.

#### 7.2 Manual cleaning for maintenance or storage

The pressure transmitter – especially the parts in contact with the product – must not be damaged. Any damage to the stainless steel membrane must be avoided. The cleaning agent must not attack the surface and seals.

Note the protection type of the device.



#### **WARNING!**

#### Risk of burning due to hot surfaces

In the CIP/SIP cleaning process, the pressure transmitter's surfaces are subjected to hot temperatures of up to 140 °C. Contact with these surfaces could result in burns to the skin.

▶ When servicing the transmitter, check its surface temperature and, if necessary, wait until it has cooled.

#### 7.3 Returns



#### NOTE!

In case of abnormalities, please send the device to the manufacturer together with a completed cover note for product returns. You can download a blank copy of this cover note online at: http://produktruecksendung.jumo.info.

# 8 Technical data

## 8.1 Mechanical features

Materials of parts coming into contact with the pressurized medium	
Membrane	Stainless steel 1.4435 (316 L)
O-ring/sealing ring	FPM, others available as an optional extra (e.g. EPDM, VMQ)
Process connection	Stainless steel 1.4404 (316 L)
Welding ring	Stainless steel 1.4404 (316 L)
Materials of other parts	
Housing	Stainless steel 1.4301 (304)
Cover cap M12 × 1 <sup>a</sup>	Stainless steel 1.4301 (304)
Electrical connection	
Attached cable	Cable fitting made from stainless steel 1.4301 (304); PUR cable with and without pressure compensation
Round plug M12 × 1	Threaded bushing made from stainless steel 1.4301 (304)
Cable socket	Holding ring/connector fastener made from high-quality plastic, comparable with PBT GF30 V0
Terminal head	Stainless steel 1.4301 (304); cable fitting: stainless steel
Rated position	Upright, with downward process connection
Operating position	Any, but there may be a zero offset relative to the rated position

a Included on autoclave-compatible variant.

# 8.2 Measuring range and accuracy

Measuring range	Linearity <sup>a</sup>	Accurac	y at		Long-	Overload	Burst
		20 °C <sup>d</sup>	-20 to +80 °C <sup>e</sup>	-20 to +100 °C	term stability <sup>b</sup>	capabili- ty <sup>c</sup>	pressure
	% MSP <sup>f</sup>	% MSP	% MSP	% MSP	% MSP per year	bar	bar
-1 to 0 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	10	20
-1 to +0.6 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	10	20
-1 bar to +1 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	10	20
-1 to +1.5 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	20	40
-1 to +3 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	25	50
-1 to +5 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
-1 to +9 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
-1 to +15 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
-1 to +24 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
-0.4 to +0.4 bar relative pressure	0.15	0.4	1	1.2	≤ 0.2	10	20
-0.1 to +0.1 bar relative pressure	0.2	0.5	1	1.2	≤ 0.2	6	10
0 to 0.1 bar relative pressure	0.25	0.75	1.2		≤ 0.2	1.5	3
0 to 0.16 bar relative pressure	0.25	0.75	1.2	1.5	≤ 0.2	6	10
0 to 0.25 bar relative pressure	0.25	0.5	1	1.2	≤ 0.2	6	10
0 to 0.4 bar relative pressure	0.15	0.4	1	1.2	≤ 0.15	10	20
0 to 0.6 bar relative pressure	0.15	0.4	1	1.2	≤ 0.15	10	20
0 to 1 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	10	20
0 to 1.6 bar relative pressure	0.15	0.3	1	1.2	≤ 0.15	20	40

Measuring range	Linearity <sup>a</sup>	Accurac	y at		Long-	Overload	Burst
		20 °C <sup>d</sup>	-20 to +80 °C <sup>e</sup>	-20 to +100 °C	term stability <sup>b</sup>	capabili- ty <sup>c</sup>	pressure
	% MSP <sup>f</sup>	% MSP	% MSP	% MSP	% MSP per year	bar	bar
0 to 2.5 bar relative pressure	0.15	0.3	1	1.2	≤ 0.1	20	40
0 to 4 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	25	50
0 to 6 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
0 to 10 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
0 bar to 16 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
0 bar to 25 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
0 bar to 40 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	300	400
0 bar to 60 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	300	400
0 bar to 100 bar relative pressure	0.1	0.25	0.75	0.8	≤ 0.1	300	400
0 to 0.6 bar absolute pressure	0.15	0.4	1	1.2	≤ 0.15	10	20
0 to 1 bar absolute pressure	0.15	0.3	1	1.2	≤ 0.15	10	20
0 to 1.6 bar absolute pressure	0.15	0.3	1	1.2	≤ 0.15	20	40
0 to 2.5 bar absolute pressure	0.15	0.3	1	1.2	≤ 0.1	20	40
0 to 4 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	25	50
0 to 5 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	25	50
0 to 6 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
0 to 10 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	50	60
0 to 16 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
0 to 25 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	120	200
0 to 40 bar absolute pressure	0.1	0.25	0.75	0.8	≤ 0.1	200	300

a Linearity according to limit point setting

b Reference conditions EN 61298-1

<sup>&</sup>lt;sup>c</sup> All measuring ranges are vacuum proof.

d Includes: linearity, hysteresis, repeatability, deviation of measuring range start value (offset) and measuring range end value

Includes: linearity, hysteresis, repeatability, deviation of measuring range start value (offset) and measuring range end value, thermal effect on measuring range start (offset) and measuring span

f MSP = measuring span

# 8 Technical data

#### 8.3 Electrical data

Voltage supply <sup>a</sup>	
2-wire circuit <sup>b</sup>	
4 to 20 mA	DC 8 to 30 V, nominal voltage DC 24 V
3-wire <sup>c</sup>	
DC 0 to 10 V	DC 11.5 V to 30 V, nominal voltage DC 24 V
DC 1 to 5 V	DC 10 V to 30 V, nominal voltage DC 24 V
DC 1 to 6 V	DC 10 V to 30 V, nominal voltage DC 24 V

The auxiliary energy of the pressure transmitter must meet SELV requirements. Furthermore, the device must be equipped with an electrical circuit that meets the requirements of EN 61010-1 with regard to "Limited-energy circuits".

<sup>&</sup>lt;sup>c</sup> Maximum current consumption ≤ 5 mA.

Burden/load <sup>a</sup>	
2-wire circuit	
4 to 20 mA	$R_{L} \le (U_{B} - 8 \text{ V}) \div 0.02 \text{ A} (\Omega)$
3-wire	
DC 0 to 10 V	R <sub>L</sub> ≥ 10 kΩ
DC 1 to 5 V	R <sub>L</sub> ≥ 10 kΩ
DC 1 to 6 V	R <sub>L</sub> ≥ 10 kΩ

<sup>&</sup>lt;sup>a</sup> Maximum effect < 0.5 %.

Behavior if measured value is out of range		
	Error signal in the case of	NAMUR exceedance, linear
Two-wire		
4 to 20 mA	≤ 3.6 mA and ≥ 21.5 mA	3.8 to 20.5 mA
Three-wire		
DC 0 to 10 V	10.7 V	0 to 10.5 V
DC 1 to 5 V	5.7 V	0.8 to 5.5 V
DC 1 to 6 V	6.7 V	0.8 to 6.5 V

Behavior after power on	Ready for operation after < 120 ms
Voltage supply influence	≤ 0.02 %/V
Reverse voltage protection	U <sub>B</sub> to 0 V (all output variants)
Short-circuit resistance	S+ to 0 V (only voltage variants)
Overvoltage protection	The operating voltage must be restricted to max. 33 V
Step response of 90 % (according to DIN 16068 Point 3.3.8)	< 5 ms

Insulation resistance	> 100 MΩ at DC 500 V			
Insulation voltage	AC 500 V			

<sup>&</sup>lt;sup>b</sup> Maximum current consumption ≤ 25 mA.

#### 8.4 Environmental influences

Admissible temperatures			
	Ambient temperature	Medium temperature	Storage temperature
with MSP <sup>a</sup> ≤ 0.4 bar	-20 to +85 °C	-20 °C to +125 °C	-20 to +100 °C
with MSP > 0.4 bar	-40 to +85 °C <sup>b</sup>	-40 to +125 °C <sup>c</sup>	-40 to +100 °C

a MSP = measuring span

<sup>&</sup>lt;sup>c</sup> Use in CIP/SIP processes: maximum of 140 °C for 1 h/day without being destroyed.

Use in CIP/SIP processes	The transmitter will withstand a medium temperature of 140 °C for 1 h/day without being destroyed.			
Autoclave-compatible version				
Device versions	Basic type extension 045, only with round plug M12 × 1			
Sterilization conditions	Complete transmitter with screwed-on protective cap			
Process duration	≤ 30 minutes			
Sterilization temperature	≤ 140 °C			
Ambient pressure during steril- ≤ 3.6 bar absolute				
ization				

Depending on how often the CIP/SIP cleaning or the autoclaving is carried out, the long-term stability may differ from the specifications given in the table on page 18.

Resistance to climatic conditions	100 % relative humidity including condensation on the device's outer case; 90 % relative humidity without condensation		
Degree of protection	According to DIN EN 60529		
Types with attached cable	IP68 <sup>a</sup> (IP66/IP68)		
Types with round plug M12 × 1	IP67 (IP66/IP67)		
Types with cable socket	IP65		
Types with terminal head	IP69 (IP66/IP69)		
Admissible mechanical load			
Vibration resistance	20 g at 10 to 2000 Hz, 10 cycles per axis, device in X, Y, Z axis, industrial requirement according to IEC 60068-2-6		
Shock resistance	50 g for 11 ms and 100 g for 1 ms, industrial requirement according to IEC 60068-2-27		
Electromagnetic compatibility (EMC)	According to DIN EN 61326-2-3		
Interference emission	Class A – only for industrial use –		
Noise immunity	Industrial requirements		
Process media	Liquid and gaseous media which are compatible with the materials of the parts coming into contact with the pressurized medium		

a For 1 h at a depth of 2 m.

b Autoclave-compatible version: ≤ 140 °C for maximum 30 minutes.

# 8 Technical data

# 8.5 Approvals and approval marks

EHEDG				
Test facility	Research Center Weihenstephan for Brewing and Food Quality			
Certificate/certification number	EL Class 1/EHEDG-C2000058			
Inspection basis	EHEDG design specifications (doc. 8 – Hygienic Design Principles)			
Valid for	Process connection 613 Clamp DN 25, 32, 40 with Tri-Clamp seals Combifit International B.V.			
	Process connection 616 Clamp DN 50 with Tri-Clamp seals Combifit International B.V.			
	Process connection 685 VARIVENT® DN 32/25 with EPDM O-ring			
	Process connection 686 VARIVENT® DN 50/40 with EPDM O-ring			
	Process connection 997 JUMO PEKA with FKM O-ring			
EAC				
Test facility	Промтехконтроль			
Certificate/certification number	EAЭC N RU Д-DE.PA01.B.80830/21			
Inspection basis	TR TS 020/2011			
Valid for	All device versions			
c UL us				
Test facility	Underwriters Laboratories			
Certificate/certification number	E201387			
Inspection basis	UL 61010-1 (3rd Ed.), CAN/CSA-22.2 No. 61010-1 (3rd Ed.)			
Valid for	All device versions with electrical connections 36, 61 and 75			

203						
产品组别 Product group: 402071	产品中有害物质的名称及含量 China EEP Hazardous Substances Information					
部件名称 Component Name						
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳 Housing (Gehäuse)	0	0	0	0	0	0
过程连接 Process connection (Prozessanschluss)	X	0	0	0	0	0
螺母 Nuts (Mutter)	0	0	0	0	0	0
螺栓 Screw (Schraube)	0	0	0	0	0	0

#### 本表格依据SJ/T 11364的规定编制。

This table is prepared in accordance with the provisions SJ/T 11364.

- ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 Indicate the hazardous substances in all homogeneous materials' for the part is below the limit of the GB/T 26572.
- ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 Indicate the hazardous substances in at least one homogeneous materials' of the part is exceeded the limit of the GB/T 26572.



#### JUMO GmbH & Co. KG

Street address: Moritz-Juchheim-Straße 1 36039 Fulda, Germany

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany

Postal address:

36035 Fulda, Germany

Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

#### JUMO Instrument Co. Ltd.

JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK

Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

#### **JUMO Process Control, Inc.**

6733 Myers Road East Syracuse, NY 13057, USA

Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com

